

## BLUETOOTH REMOTE (ADDITIONAL ACCESSORY)

### Remote must be paired to the player via Bluetooth before use:

1. Direct remote to the player and press any button on the remote. The remote and the player will pair automatically.
2. If the remote was already paired before, or in case of any problems: press and hold the "ENTER" and "V+" buttons on the remote for 3 seconds to put the remote into pairing mode. Use "Setup" / "System" / "Remotes & accessories" menu to unpair and pair the remote again.

### Using Remote to Control TV

 
You can program 4 learnable buttons (located in "TV" section: "TV DOWN", "TV UP", "TV INPUT", "TV POWER") to control your TV or other equipment:

1. Press and hold the "TV UP" and "TV DOWN" buttons on the remote for 3 seconds. LED - 🔴
2. Press one of 4 learnable buttons on the remote. LED - 🔴 🔴 🔴
3. Place your remote and the other remote on a table so that the IR emitters of both remotes are directed towards each other and are at a distance of about 1 cm.
4. Press and hold a button on the other remote until the LED indicator on your remote stops blinking. This means that the button learning is complete.
5. Learn other buttons the same way if needed (repeat steps 1-4).

### Reset Remote to Factory Defaults

Press and hold "ENTER" and "TOP MENU" buttons on the remote for 3 seconds.

More information on functions of the remote: [Dune-HD.com/support/rcu](http://Dune-HD.com/support/rcu)

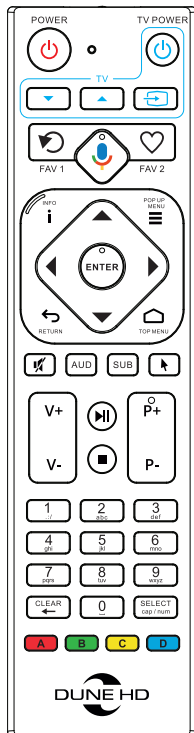

## Keys Description

- **POWER** — turn the player on/off.
- **TV section (TV DOWN, TV UP, TV INPUT, TV POWER)** — learnable buttons to control TV or other equipment (see "Using Remote to Control TV" section).
- **FAV1** (🔍) — "Recent" menu or user-defined function.
- **FAV2** (❤️) — "Favorites" menu or user-defined function.
- **MIC** (🗣️) — microphone / search.
- **Arrows (⬅️➡️⬆️⬆️), ENTER, RETURN (↵), TOP MENU (🏠), POP UP MENU (☰), INFO (i)** — main buttons for controlling the player (navigate across the items on the screen, open/use the currently selected item, go back to the previous screen, go to the main menu, show/hide popup menu with actions for the currently selected item or the current player state, show/hide information about the currently selected item or the current player state, control some other player functions).
- **MUTE** (🔇) — turn the sound on/off.
- **AUDIO (AUD), SUBTITLE (SUB)** — toggle audio tracks and subtitle tracks.
- **MOUSE** (🖱️) — toggle mouse mode (air mouse).
- **PLAY/PAUSE (▶️||), STOP (■)** — control the playback and some other player functions.
- **V+/V- (volume up / volume down)** — adjust the volume.
- **P+/P- (page up / page down)** — scroll up and down in various lists, switch to the next/previous TV channel, control some other player functions.
- **0-9** — enter numbers and text; control some other player functions.
- **CLEAR** — delete the last entered character, delete the currently selected item, control some other player functions.
- **SELECT** — switch text input mode, add the item to the selection list, control some other player functions.
- **A (Red), B (Green), C (Yellow), D (Blue)** — control various player functions.

NOTE: Button support and functions depend on particular applications. Not all apps support all buttons.